

# Thorogood

*It's who you are.*

## LACING INSTRUCTION

Thorogood boot 834-6111 with optional lace-in front zipper

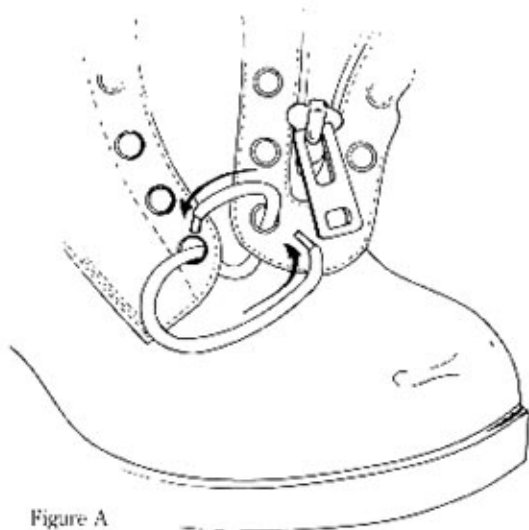
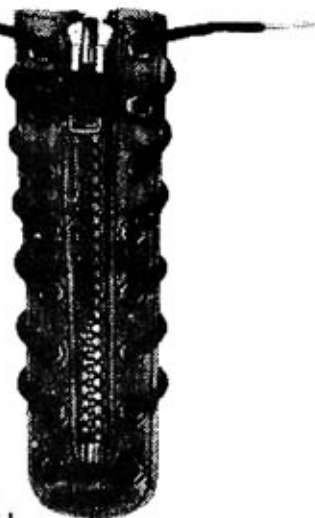


Figure A

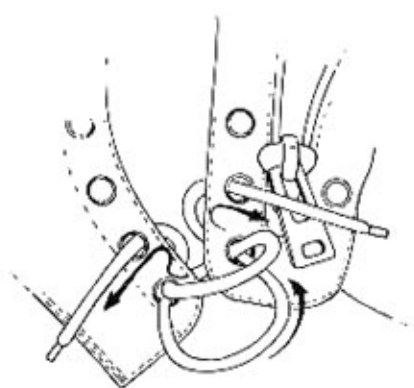


Figure B

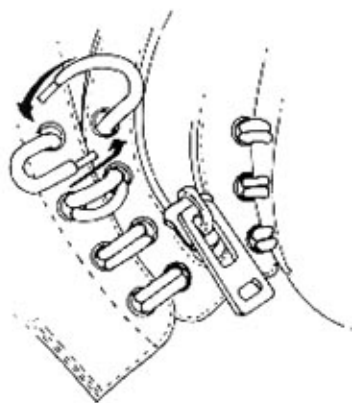


Figure C

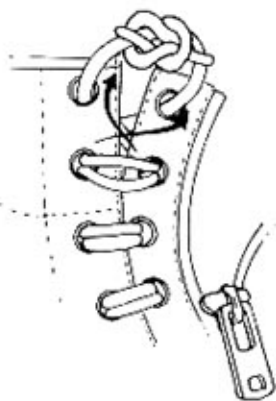


Figure D

### FIRST STEP

Insert lace into the first eyelets from underneath the zipper insert and the gusset. Draw lace up through eyelets (Figure A).

### SECOND STEP

Cross right hand lace to the left hand eyelet horizontally (Figure A), Insert the lace down into the first eyelet from the top (Note that the right hand lace enters down into the same eyelet that the left hand lace was drawn up from). Draw right hand lace up through second eyelet (Figure B). Follow the same directions with the left hand lace. **DO BOTH SIDES OF THE ZIPPER AT THE SAME TIME.**

### THIRD STEP

Continue lacing the same as Step #2 snugging the lace as you progress (Figure C). Wearing the boot for the first several steps will give the approximate spacing needed for the rest of the lacing. **DO BOTH SIDES AT THE SAME TIME.**

### FOURTH STEP

Terminate the lacing by passing the right hand lace diagonally crossing underneath the zipper insert and drawing it up through the last eyelet (Figure D). Do the same with the left hand lace. Adjust laces for proper tension with foot in the boot, zipper closed, both sides laced. When adjustment is correct, tie a square knot on the outside of insert (Figure D), trim and burn the ends.